


The OZX-FTXX location-specific flow-through sensor is designed for ease of use and reliability in automotive applications. This sensor allows quick installation and inflation without requiring dismounting, ensuring a hassle-free experience. It measures both pressure and temperature, with an impressive capacity of up to 180 PSI at 433 MHz, offering accurate real-time data. Its long-lasting battery exceeds 5 years, ensuring minimal maintenance.

The Sensor

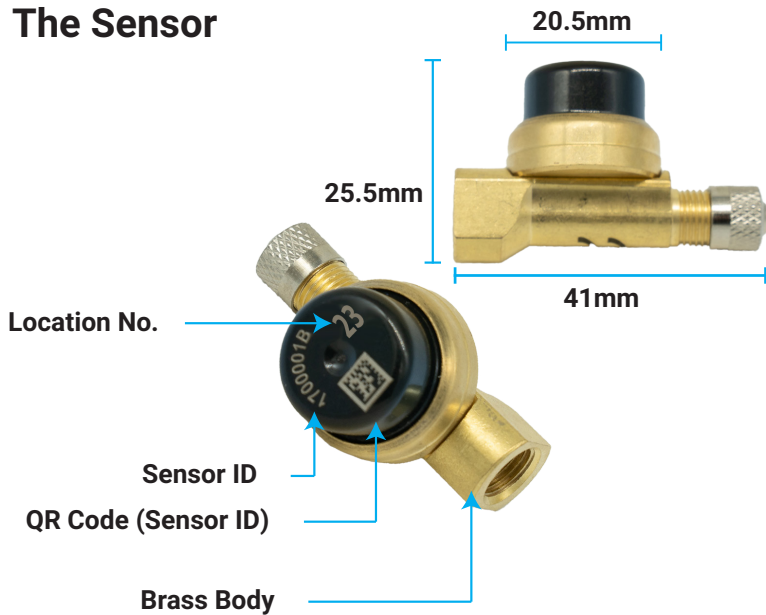

Specifications:

Pressure Range: 0 to 180 PSI

Pressure Resolution: 1.5 PSI

Pressure Accuracy: ± 1.5 PSI

Temperature Range: - 40 to 85°C (125 °C Max)

Temperature Resolution: 1°C

Temperature Accuracy: ± 4°C

Dimensions: 41.3 x 25.5 x 20.5 mm

Sensor Weight: 27 grams ± 2

Life: Approx. 5 plus years

TX Frequency: 433.92Mhz

Key Features

The OzSensor OZX-FTXX sensors feature a unique numbering system that ensures accurate pressure and temperature monitoring for each wheel location.

Easily Programmable: The sensors offer various programming options, including automatic relearn, QR code scanning, NFC, or manual ID input. All programming and configurations can be done seamlessly through the OZ-X Installer App.

Location Specific Sensor Part Numbers:

OZX-FT11 - Flow Through Sensor Location 11
 OZX-FT12 - Flow Through Sensor Location 12
 OZX-FT13 - Flow Through Sensor Location 13
 OZX-FT14 - Flow Through Sensor Location 14
 OZX-FT21 - Flow Through Sensor Location 21
 OZX-FT22 - Flow Through Sensor Location 22
 OZX-FT23 - Flow Through Sensor Location 23
 OZX-FT24 - Flow Through Sensor Location 24
 OZX-FT31 - Flow Through Sensor Location 31
 OZX-FT32 - Flow Through Sensor Location 32
 OZX-FT33 - Flow Through Sensor Location 33
 OZX-FT34 - Flow Through Sensor Location 34
 OZX-FT41 - Flow Through Sensor Location 41
 OZX-FT42 - Flow Through Sensor Location 42
 OZX-FT43 - Flow Through Sensor Location 43
 OZX-FT44 - Flow Through Sensor Location 44


Installation/Service Tool Part Numbers:

OZX-TKIT - Complete Tool Kit for TPMS Installation & Service
 OZX-TDK300 - Sensor Installation Torque Tool w/ Extension

Installation: Sensors are location specific, so you must ensure you install the correct numbered sensors in the correct location. Refer to example Trucks and Trailers location guide below.

IMPORTANT NOTE: SENSORS MUST BE INSTALLED DIRECTLY ONTO THE WHEELS VALVE STEM. DO NOT INSTALL THEM ON ANY TYPE OF VALVE EXTENSION AS THE WEIGHT OF THE SENSOR WILL CAUSE THE VALVE STEM/EXTENSION TO FLEX, RUB AND BREAK. DO NOT FIT SENSORS TO ANY VALVE THAT IS BENT OR DAMAGED. SENSORS SHOULD NOT BE OVERTIGHTENED. RECOMMENDED TORQUE 2-3Nm / HAND TIGHT ONLY. SPRAY SENSOR / VALVE WITH SOAPY WATER TO ENSURE NO LEAKS AFTER INSTALLING. FOR INNER WHEELS, ONCE THE SENSOR IS FITTED DIRECTLY TO THE WHEELS VALVE AND IF YOU REQUIRE AN EXTENSION, PLEASE ORDER PART NO. OZX-PE140 (140MM WHITE PLASTIC VALVE EXTENSION). IF THE VALVE IS BENT, DAMAGED OR CROSS THREADED, MAKE SURE THIS IS REPLACED BEFORE ATTEMPTING TO INSTALL ANY SENSOR.


1) Remove valve cap and / or any extension. Check Valve condition.

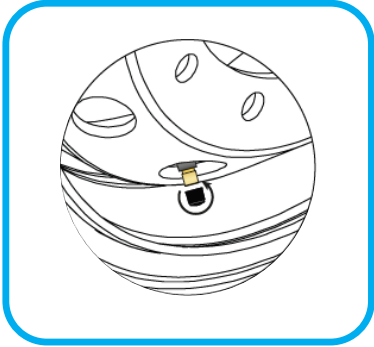


2) Hand Screw the correct Numbered sensor to suit wheel location








3) Tighten using 2-3Nm Torque (or hand tight) DO NOT USE A WRENCH

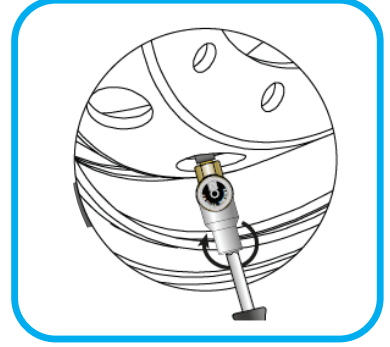

TRUCKS

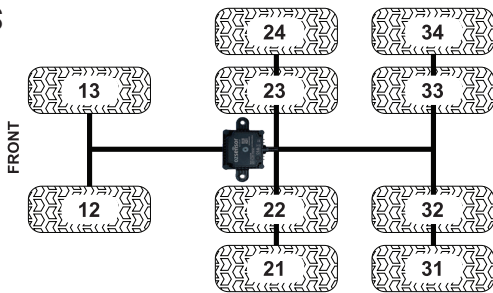

TRAILERS

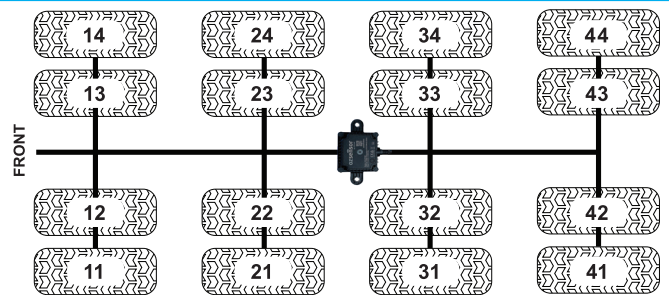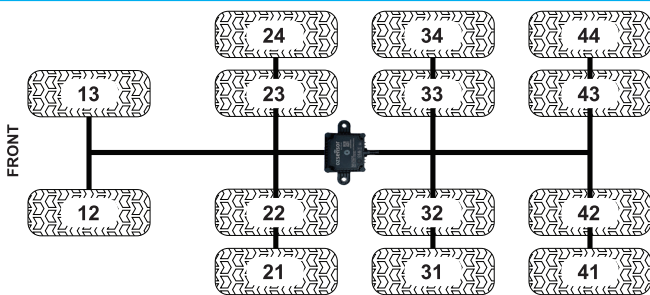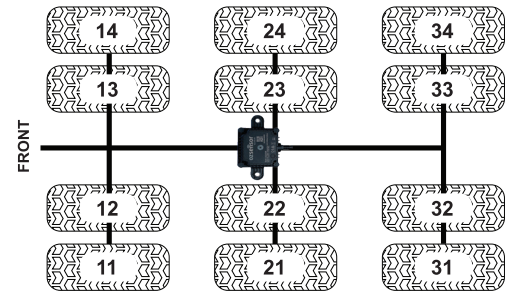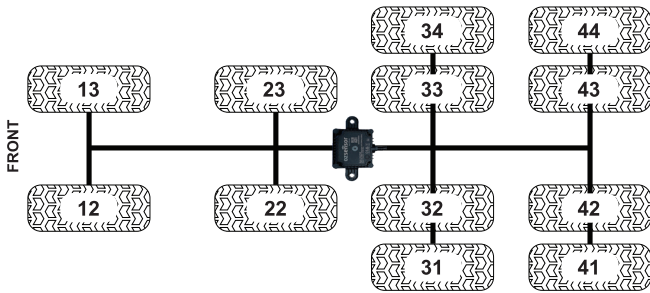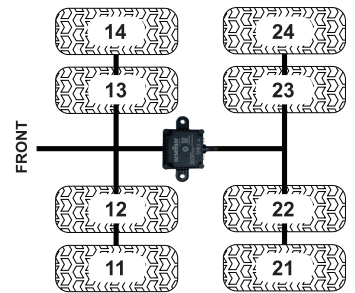

TROUBLE SHOOTING

For the latest trouble shooting and support documents, please scan the QR Code or visit our website www.ozsensor.com.au/support



Zylux Distribution Pty. Ltd. - 166 Christmas Street, Fairfield, VIC, 3078, Australia.
Phone: (03) 9482 2203 | Email: info@zylux.com.au